


Instructions for electrician STEPS 2 - 18


WARNING: THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED INDEPENDENTLY OF AN OUTLET BOX.

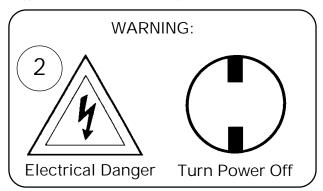

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

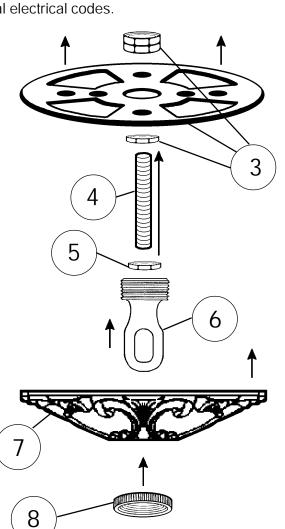

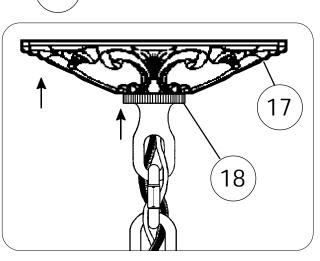

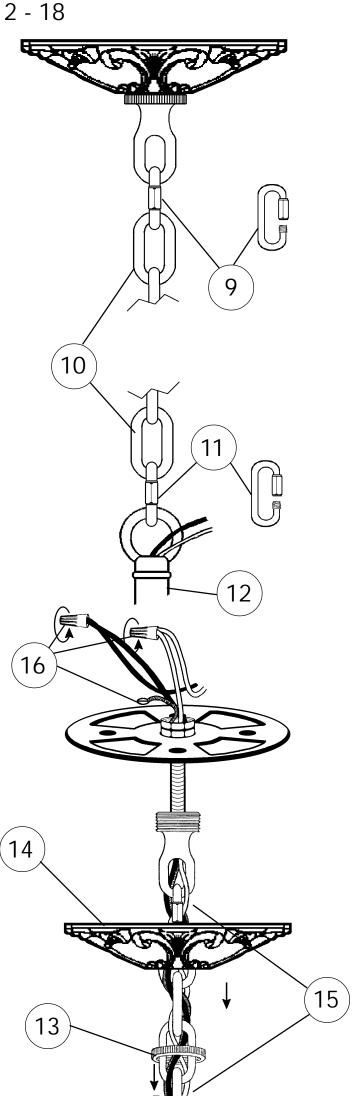



(Finish Option)



SCHONBEK®

See diagram on back page Follow steps in exact order Save this trim diagram for future reference

	_
IMPORTANT	
(1) Person who opens carton should record the	
following information for future service.	
CODE # Four-digit number on outside of carton.	
 PACKER # See crystal package label.	
ORDER # See crystal package label.	
ONDER " See crystal package label.	

Instructions for crystal trimming #9764 STEPS 19 - 45 (000000) #9935/1 STEPS #2 - #18 ON 39 **BACK PAGE** #9934 Ε Use lock washer and 19 nut to secure arms in (30)place. 29 (40)#9940/70/1 20 Connect white arm 28 BOTTOM wires to neutral 27 DISH column wire (ribbed or TOP WASHER marked is neutral). Connect ROSETTE black arm wires to power wire in column. NO MORE THAN 5 - WIRES PER WIRE NUT. ROUND Use electrical tape to secure wire nuts. NUT #9937 Carefully press wires as close as possible to the underside of both washers. #9764/1 Attach the washers (top and bottom) 38 26 with the lock washer and nut. Attach **BOTTOM** #9764/1 25 WASHER the bottom dish with the rosette and the round nut. Install candle slips and bobeches onto arms. #9930 #9940/70/1 23 You will need 24 - C10 25 Watts Recommended 60 Watts Max 24 Install bulbs and be R 22 sure to test fixture BEFORE trimming. (43)(42)⁽⁴¹⁾ **HANG** ³⁷ 32 **CRYSTAL** (36)WITH FLAT G 35 SIDE TO 34 **FRONT** (33)Tighten With Tool Provided. N10303-**