


Instructions for electrician STEPS 2 - 18


WARNING: THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED INDEPENDENTLY OF AN OUTLET BOX.

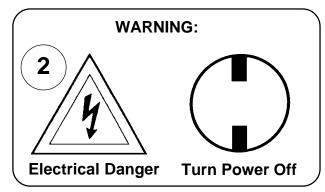

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

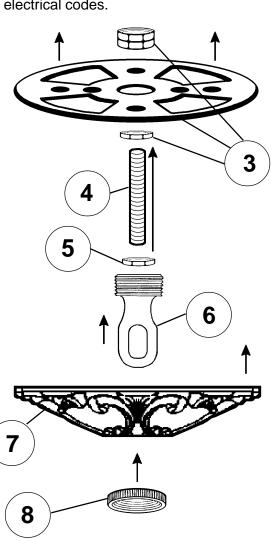


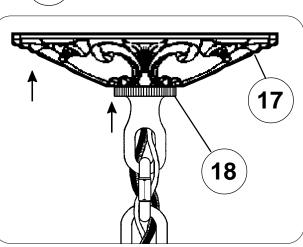

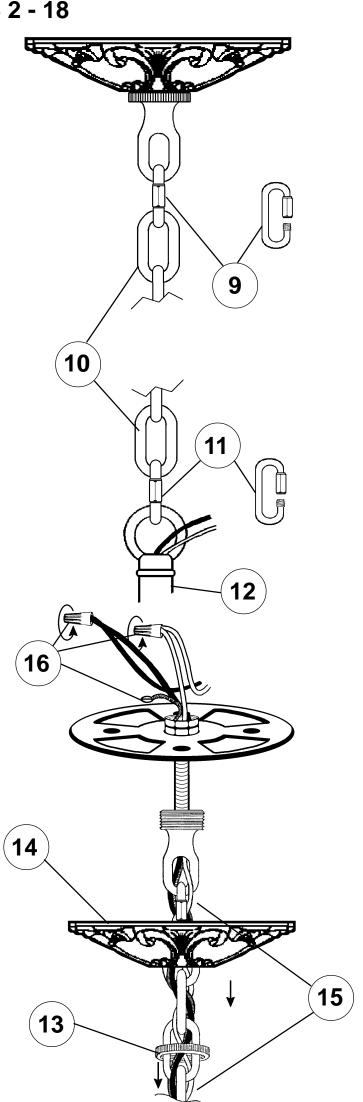

CHANDELIER 5013- ___ TRIM DIAGRAM

(Finish Option)

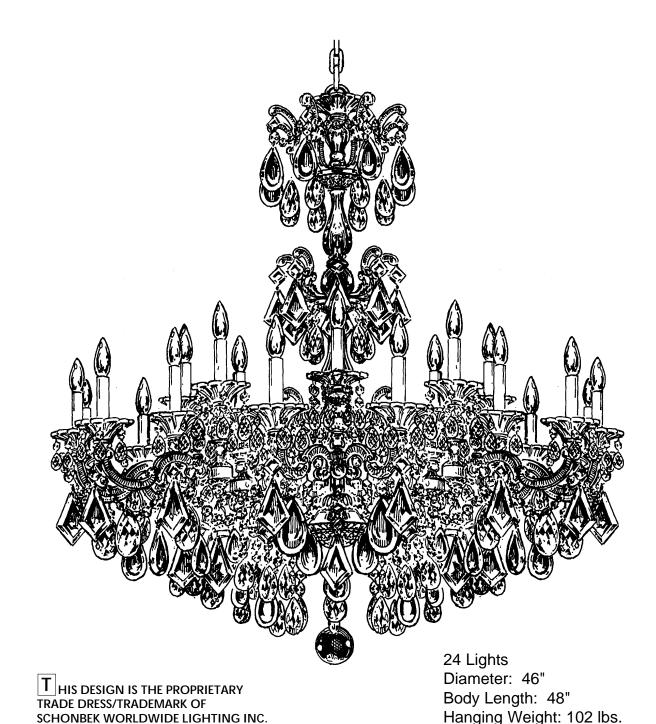

SCHONBEK®

See diagram on back page Follow steps in exact order Save this trim diagram for future reference

1

IMPORTANT


Person who opens carton should record the following information for future service.

CODE # _____ Four-digit number on outside of carton.

PACKER # _____ See crystal package label.

ORDER # _____ See crystal package label.


Instructions for crystal trimming

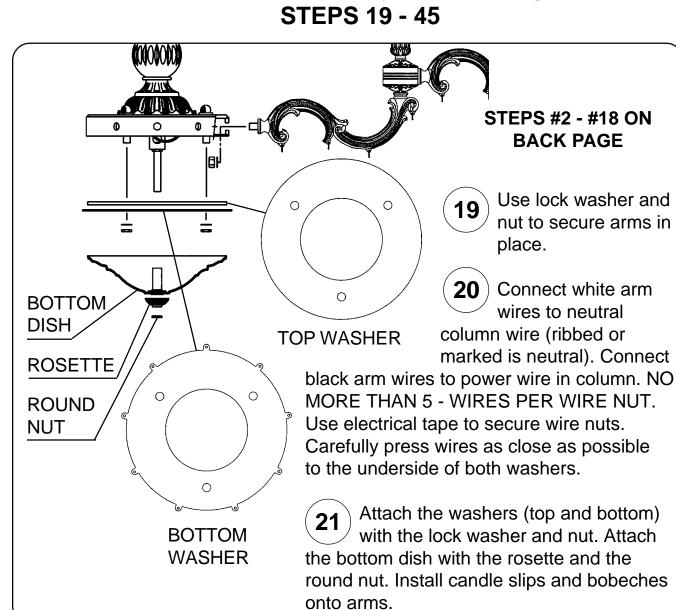

You will need 24 - C10 25 Watts Recommended

Install bulbs and be

60 Watts Max

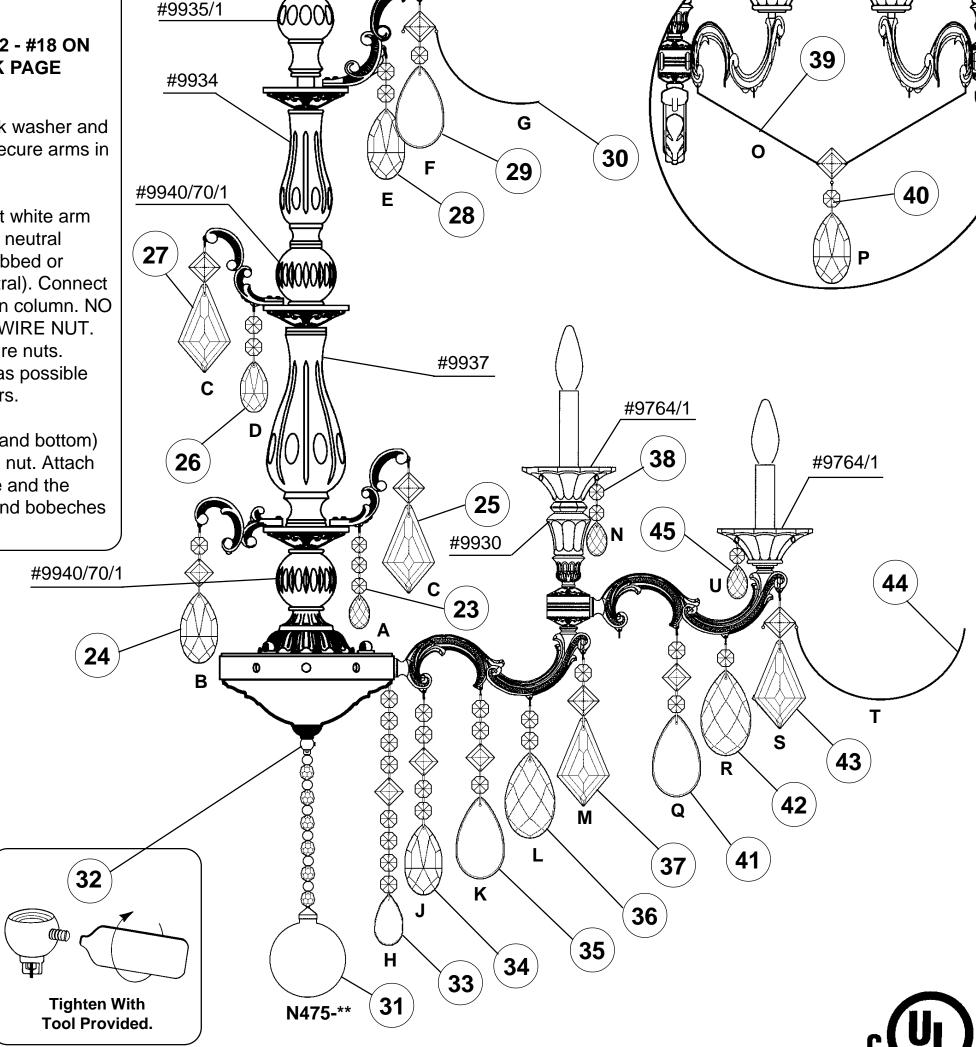



5013-____

#9764