




15

WARNING: THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED INDEPENDENTLY OF AN OUTLET BOX.

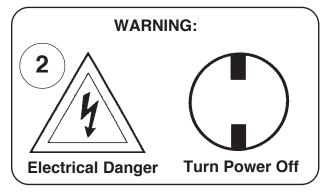


All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

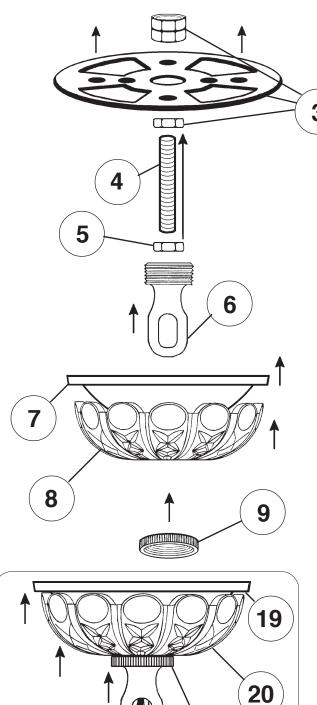

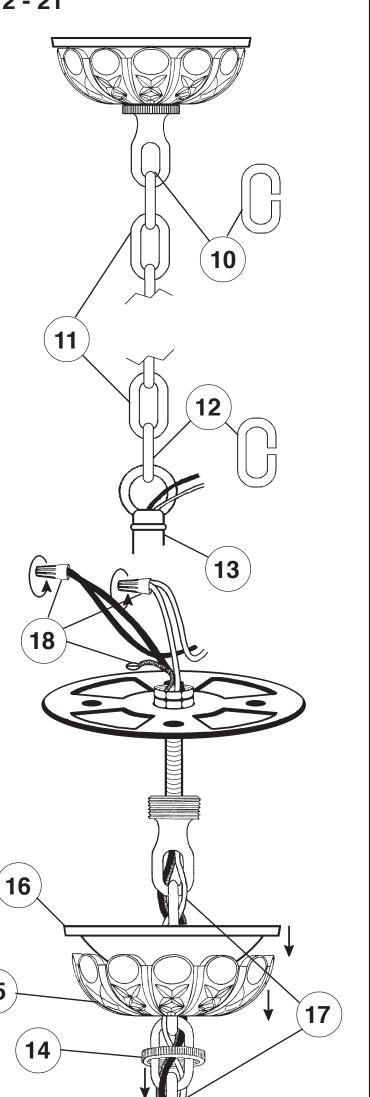




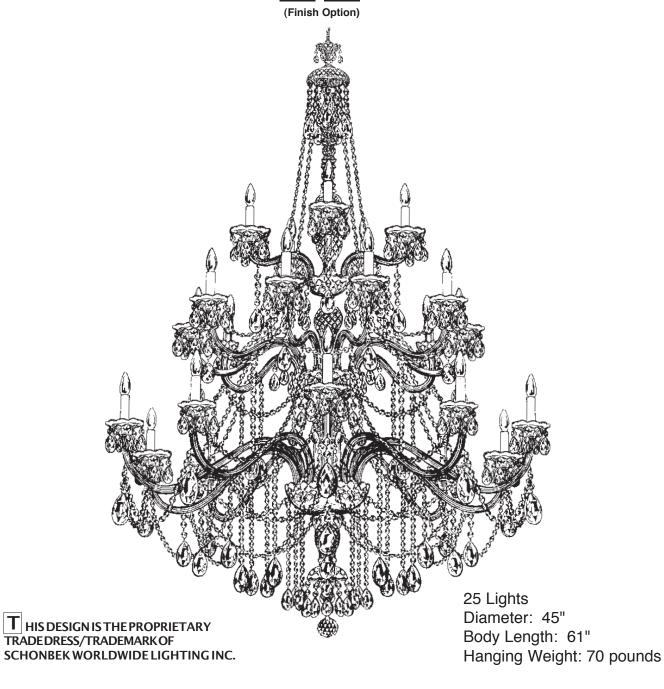


SCHONBEK®

See diagram on back page Follow steps in exact order Save this trim diagram for future reference

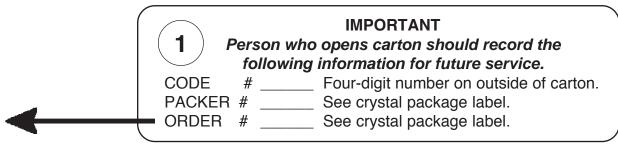


SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE: #D5,404,285,#D5,460,269,#D5,873,652,#D338,278&#D339,879


Instructions for crystal trimming STEPS 22 - 43

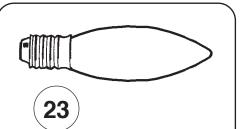

You will need 25 - C10 25 Watts Recommended 60 Watts Max

Install bulbs and be sure to test fixture BEFORE trimming.

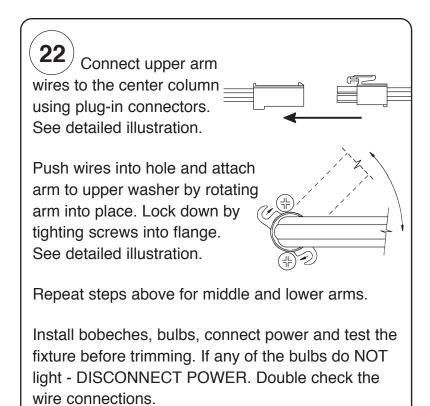

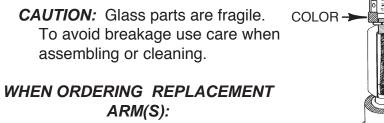

- Give arm number from trim diagram
- Give color code from the arm itself

