


SCHONBEK®

SCHONBEK IS A WORLD LEADER IN
CHANDELIER DESIGN. PATENTS INCLUDE:
#D5,460,269

CHANDELIER 6811-____S TRIM DIAGRAM

(Finish Option)

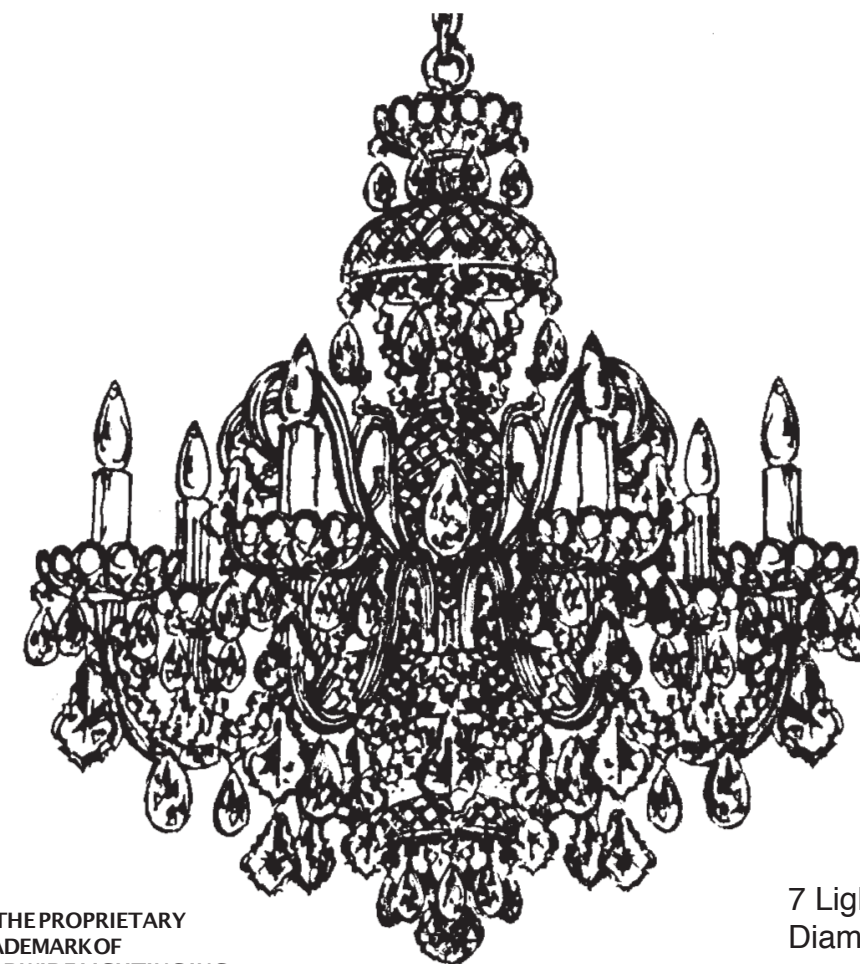

THIS DESIGN IS THE PROPRIETARY
TRADE DRESS/TRADEMARK OF
SCHONBEK WORLDWIDE LIGHTING INC.

7 Lights
Diameter: 25"
Body Length: 31"

SCHONBEK®

This fixture was designed and manufactured in Plattsburgh, N.Y. Our high-quality crystal fixtures are made with state-of-the-art manufacturing equipment. If you have any questions about this or any of our more than 450 crystal products, contact your nearest authorized Schonbek distributor.

CAUTION... RISK OF ELECTRICAL SHOCK. Make sure the electrical supply to the chandelier is turned off at the main fuse or circuit breaker before doing any installation. All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

HANGING WEIGHT: 28 pounds.

BULBS: (7) Candle shaped candelabra base C10 bulbs, recommend 25 watts for best appearance.
60 - Watts Maximum

WARNING: This chandelier meets UL/CSA requirements. Any tampering will void UL/CSA certification.

Follow steps in exact order
Save this trim diagram for future reference


1

IMPORTANT

Please record the following information for future service.

CODE # _____ Four-digit number on outside of carton.
PACKER # _____ See crystal package label.
ORDER # _____ See crystal package label.

**Instructions for electrician
STEPS 2 - 7**

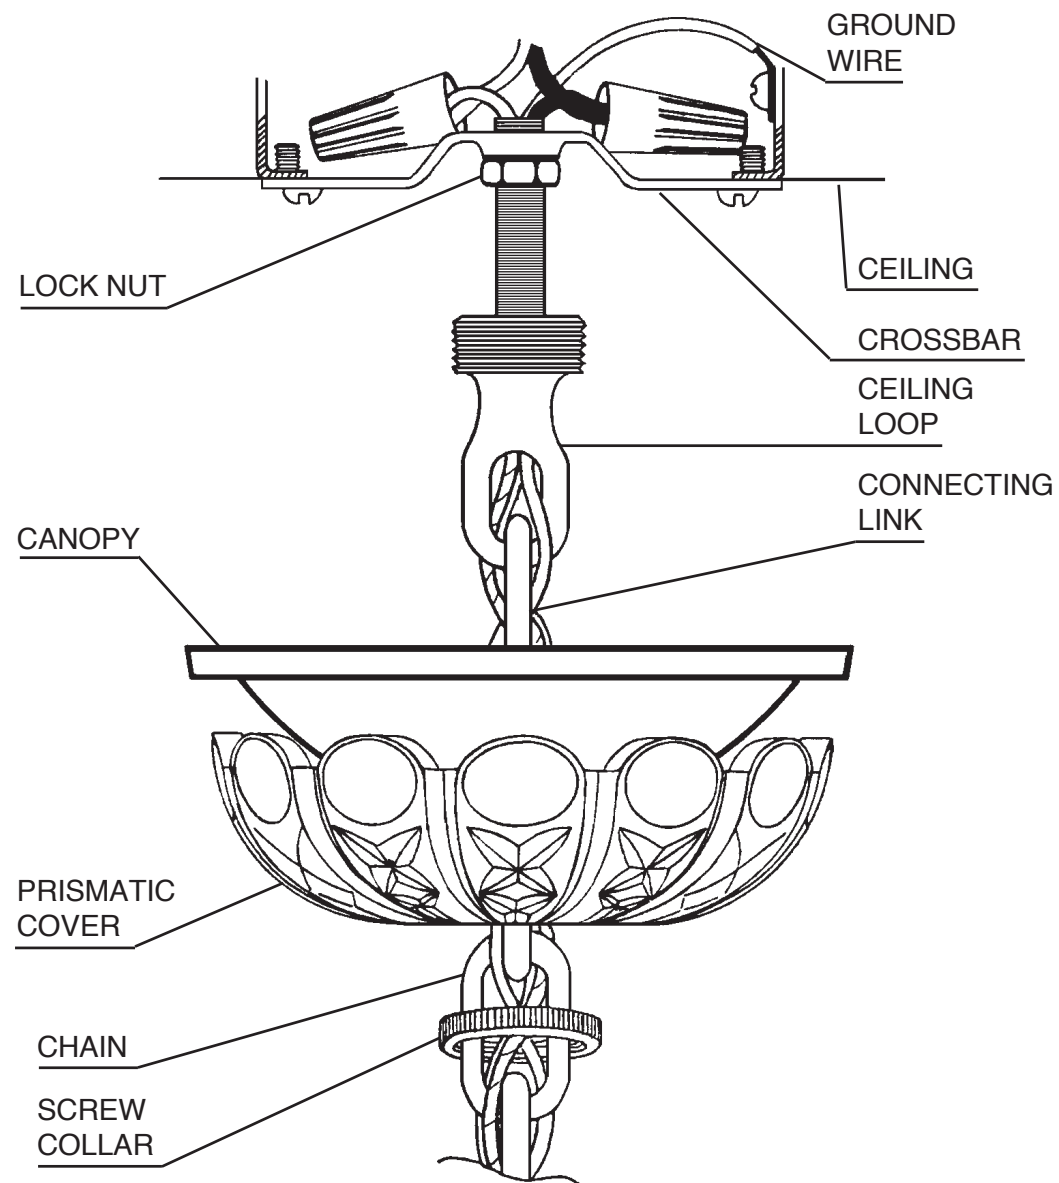

2 MAKE SURE POWER IS DISCONNECTED!!

3 Attach washer to supporting member in ceiling sufficient to support weight of fixture.

4 Slip screw collar, prismatic cover and metal canopy over chain. Determine the suspension length of the fixture and cut chain, if necessary. Use two connecting links to attach chain to chandelier loop and ceiling loop.


5 Insert stem wire through chain and ceiling loop. Connect wires. Fixture **MUST** be grounded.

6 Check distance from ceiling to loop to assure canopy assembly will be flush against ceiling.

7 Attach canopy to ceiling with screw collar.

FRAGILE:

CAUTION: Glass parts are fragile. To avoid breakage use care when assembling or cleaning.

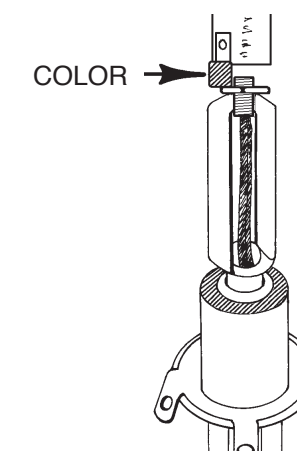

**WHEN ORDERING
REPLACEMENT ARM(S):**

- Give arm number from trim diagram
- Give color code from the arm itself

MAINTENANCE:

Use a soft, lint - free cloth to clean the metal frame.

UNDER NO CIRCUMSTANCES SHOULD METAL POLISHES, CLEANERS, ABRASIVES OR AEROSOL SPRAYS BE USED.


While the latest finishing techniques have been used on the metal frame, such finish cannot be unconditionally guaranteed. The main cause of deterioration, apart from certain atmospheric conditions, is improper cleaning.

To clean the crystals, polish with a damp chamois.

You are cleaning delicate jewelry... Take the greatest care.

IMPORTANT:

Do not clean crystals in a dishwasher. The finish of the metal clips and hangers will be ruined and the crystals may be damaged.

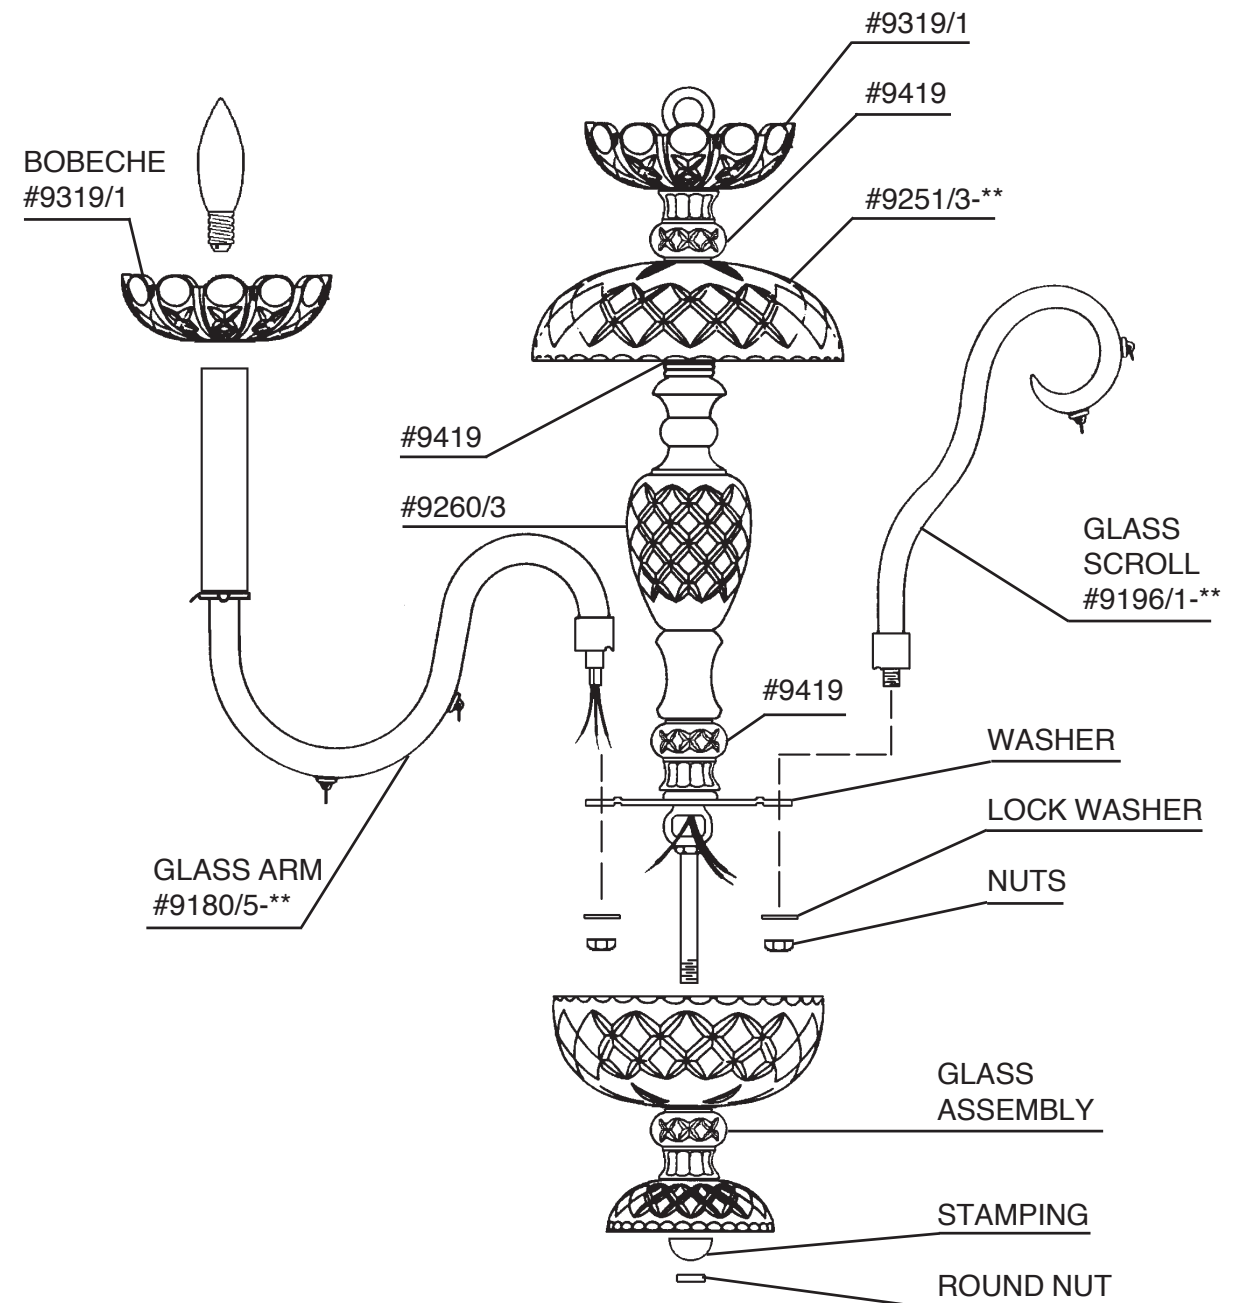


8 Install arms and scrolls into washer. Line up holes in arms and scrolls with dimple in washer. Use lock washer and nut to secure arms and scrolls in place. **NOTE: Alternate arms and scrolls.**

9 Connect bare ground wires in each arm to bare ground wire in center column. Use electrical tape to secure wire nuts. **NO MORE THAN 5 - WIRES PER WIRE NUT.** Sufficient quantities of jumper wires and wire nuts are provided.

10 Connect white arm wires to neutral column wire (ribbed or marked is neutral). Connect black arm wires to power wire in column. Carefully press wires as close as possible to the underside of washer. Attach glass assembly with stamping and round nut provided.

11 Install bulbs, connect power and test the fixture **BEFORE** trimming. If any of the bulbs do **NOT** light - **DISCONNECT POWER.** Double check the wire connections.

Instructions for crystal trimming
STEPS 12 - 21

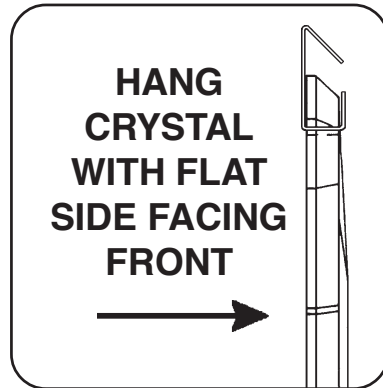

12 Hook Crystal "K" into the brackets on the upper column bobèche.

13 Hook Crystal "A" into every other ring on the center column bobèche. Hook Chain "B" into the loops of Crystal "A". Chains "B" are swagged between Crystal "A". Hook Crystal "C" into the remaining rings on the center column bobèche.

14 Screw Crystal Ball "J1" onto the bottom of chandelier. Tighten set screw with allen wrench provided to lock ball into position.

15 Hook Crystal "K1" into rings on the lower column bobèche.

16 Hook Crystal "D" into the lower ring on the glass scroll.

17 Hook Chains "L" into loops of Crystal "D" and side tab under bobèche on arm. Chains "L" swagged between Crystal "D" and side tabs under bobèche on arm.

18 Hook Crystal "E" into the upper ring on the glass scroll.

19 Hook Crystal "F1" & "G" of each into rings on glass arm.

20 Hook Crystal "H" into center tab under bobèche on arm.

21 Every bobèche is trimmed with Crystal "K", one suspended from every bracket.

