



## Instructions for electrician

### STEPS 2 - 6

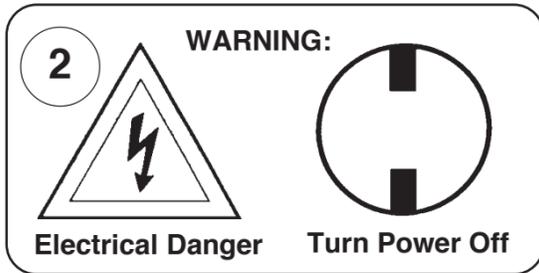

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

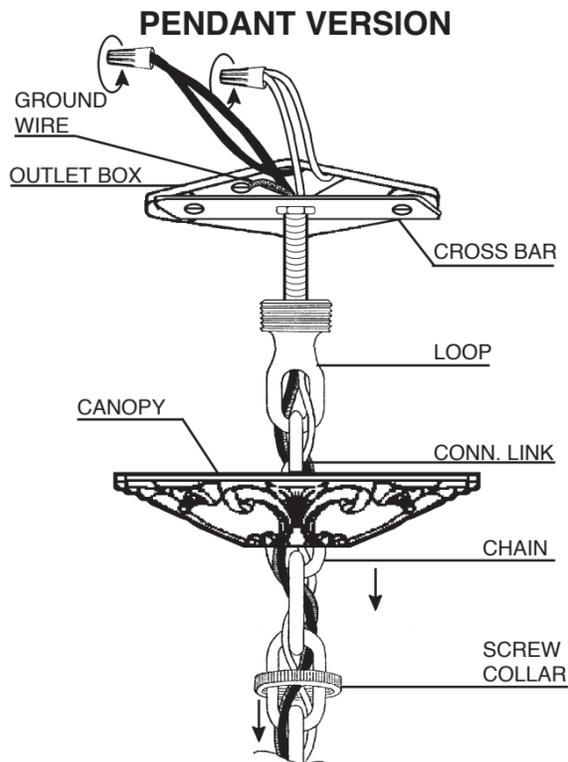


**3** Attach crossbar to outlet box.

**4** Slip screw collar and metal canopy over chain. Determine the suspension length of the fixture and cut chain, if necessary. Use two connecting links to attach chain to chandelier loop and ceiling loop.

**5** Insert stem wire through chain and ceiling loop. Connect wire. Fixture **MUST** be grounded. Check distance from ceiling to loop to assure canopy assembly will be flush against ceiling and tighten with lock nut. Attach canopy to ceiling with screw collar.

**6** Screw bulbs into sockets. Test power to insure proper wiring before hanging trim from fixture.

### CLOSE TO CEILING VERSION

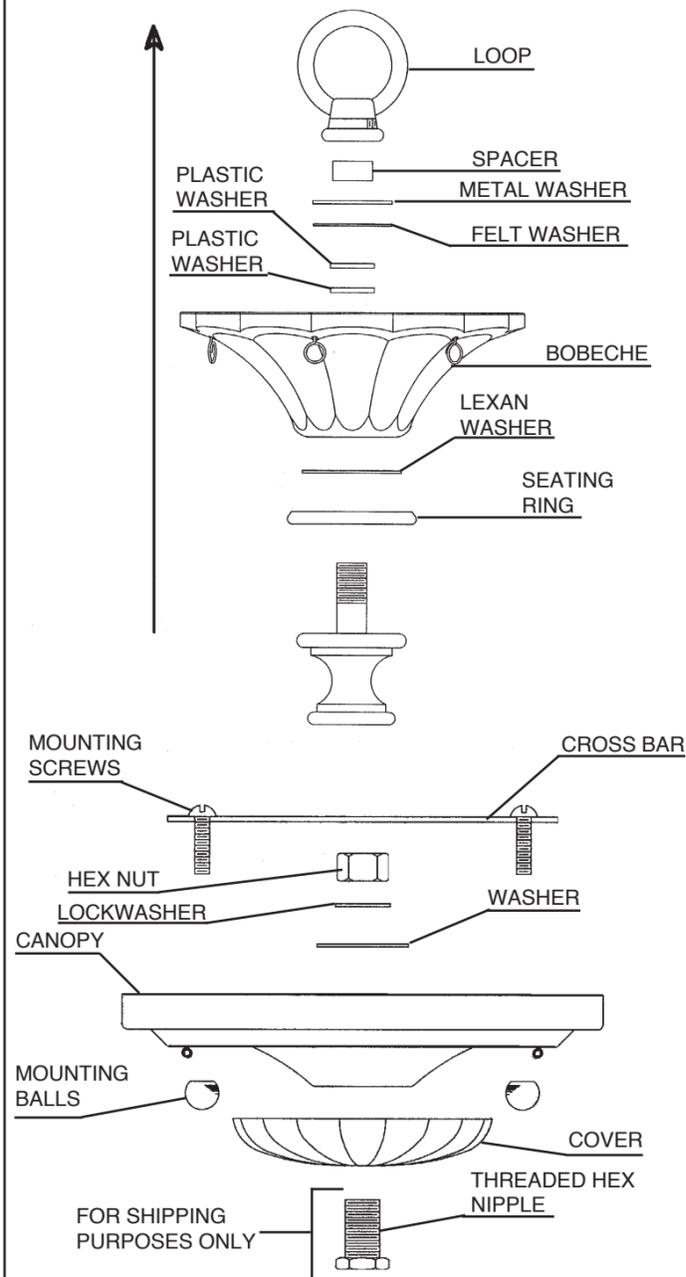

**3** Remove set screw from loop with tool provided. Remove all component parts from loop to seating ring. Remove threaded hex nipple and nut from assembled canopy. Run wires up through cover, canopy and component parts and tighten hex nut.

**4** Attach cross bar to outlet box. Connect wire.

**5** Attach canopy to ceiling with mounting balls, thereby retaining complete fixture against ceiling.

**6** Screw bulbs into sockets. Test power to insure proper wiring before hanging trim from fixture.

## CHANDELIER 5344- \_\_\_\_\_ TRIM DIAGRAM

(Finish Option)



4 Lights  
Diameter: 14-1/2"  
Body Length: 18"  
Hanging Weight: 8 lbs.

4 Lights  
Diameter: 14-1/2"  
Body Length: 16-1/2"  
Hanging Weight: 8 lbs.

**T**HIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADE MARK OF SCHONBEK WORLDWIDE LIGHTING INC.

# SCHONBEK®

**See diagram on back page  
Follow steps in exact order  
Save this trim diagram for future reference**

**1**

**IMPORTANT**  
*Person who opens carton should record the following information for future service.*

CODE # \_\_\_\_\_ Four-digit number on outside of carton.  
PACKER # \_\_\_\_\_ See crystal package label.  
ORDER # \_\_\_\_\_ See crystal package label.



**Instructions for crystal trimming**  
**STEPS 7 - 14**




**7**

You will need 4 - B10  
25 Watts Recommended  
40 Watts Max

Install bulbs and be  
sure to test fixture  
BEFORE trimming.


**8**

#9934

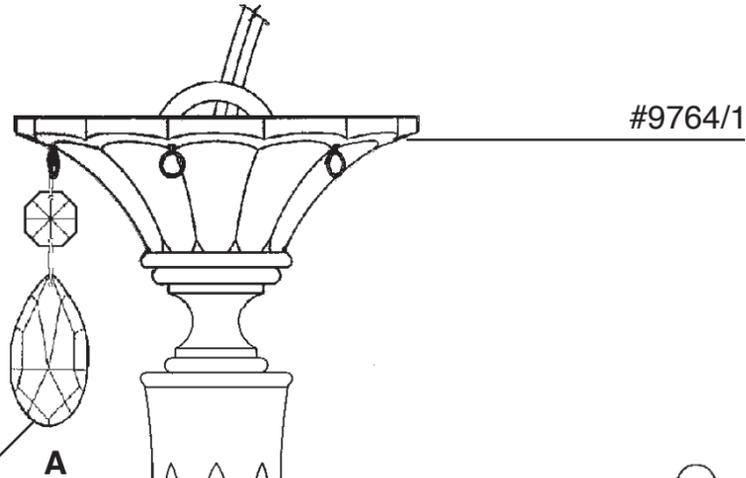

**8**

#9934

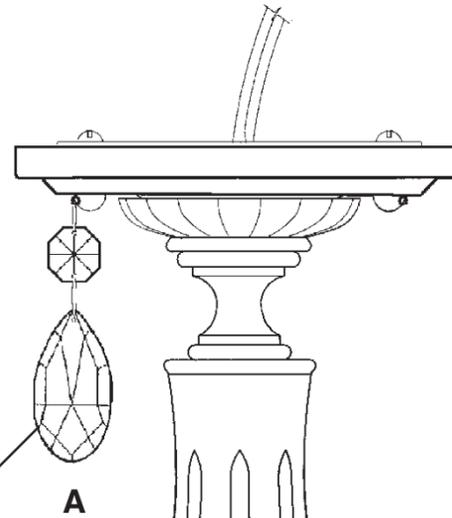

**HANG  
CRYSTAL  
WITH FLAT  
SIDE FACING  
FRONT**



**14**

F

#9764/1

TO LETTER "D"  
ON NEXT ARM

E

**13**

D


**12**

C

**11**

**9**

N10124-\*\*

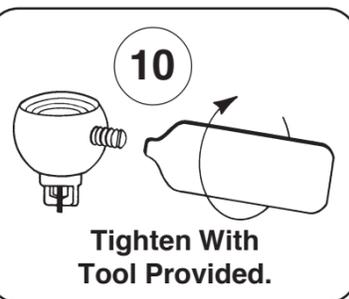

**10**

Tighten With  
Tool Provided.

**14**

F

#9764/1

TO LETTER "D"  
ON NEXT ARM

E

**13**

D

**12**

C

**11**

**9**

N10124-\*\*