

## SCHONBEK 1870


## NOUVEAU HAMILTON HA5837N- \_\_\_ H

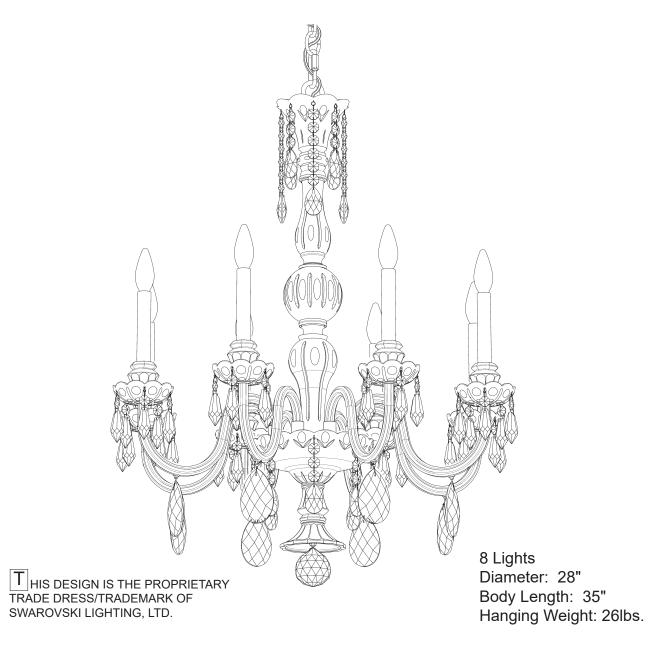


## SCHONBEK


1870

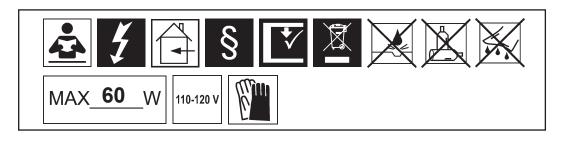


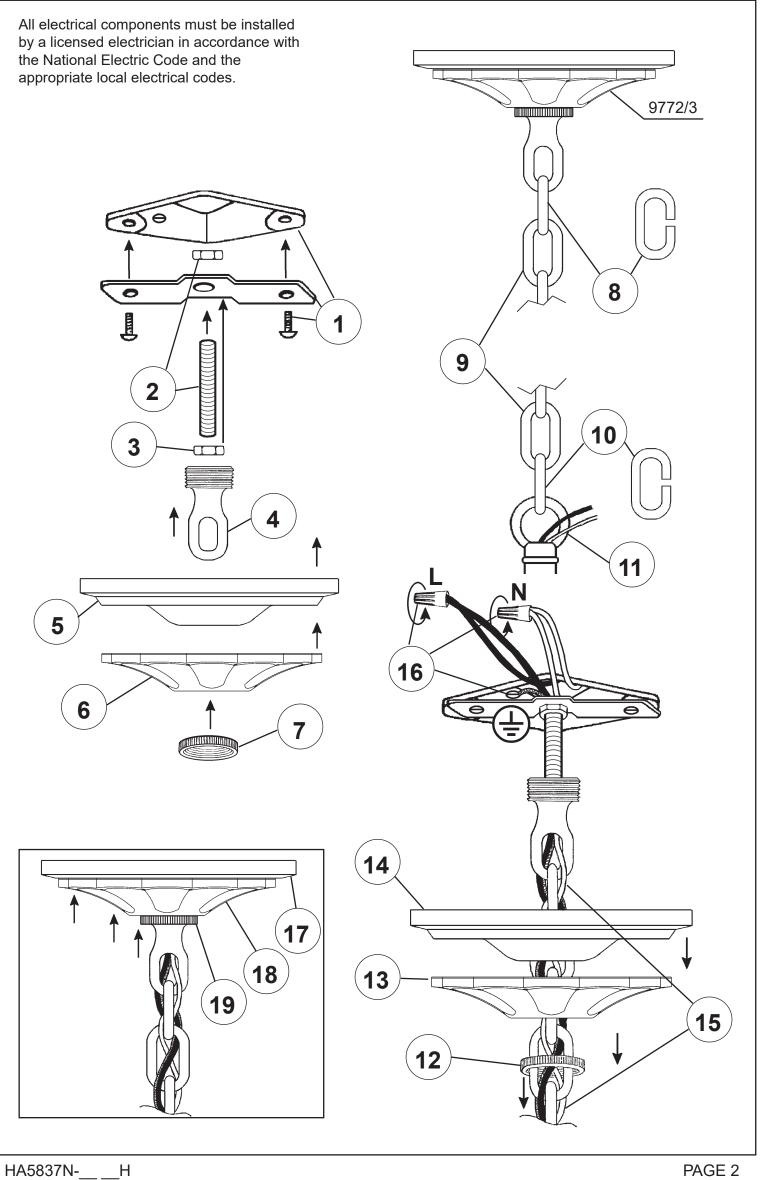

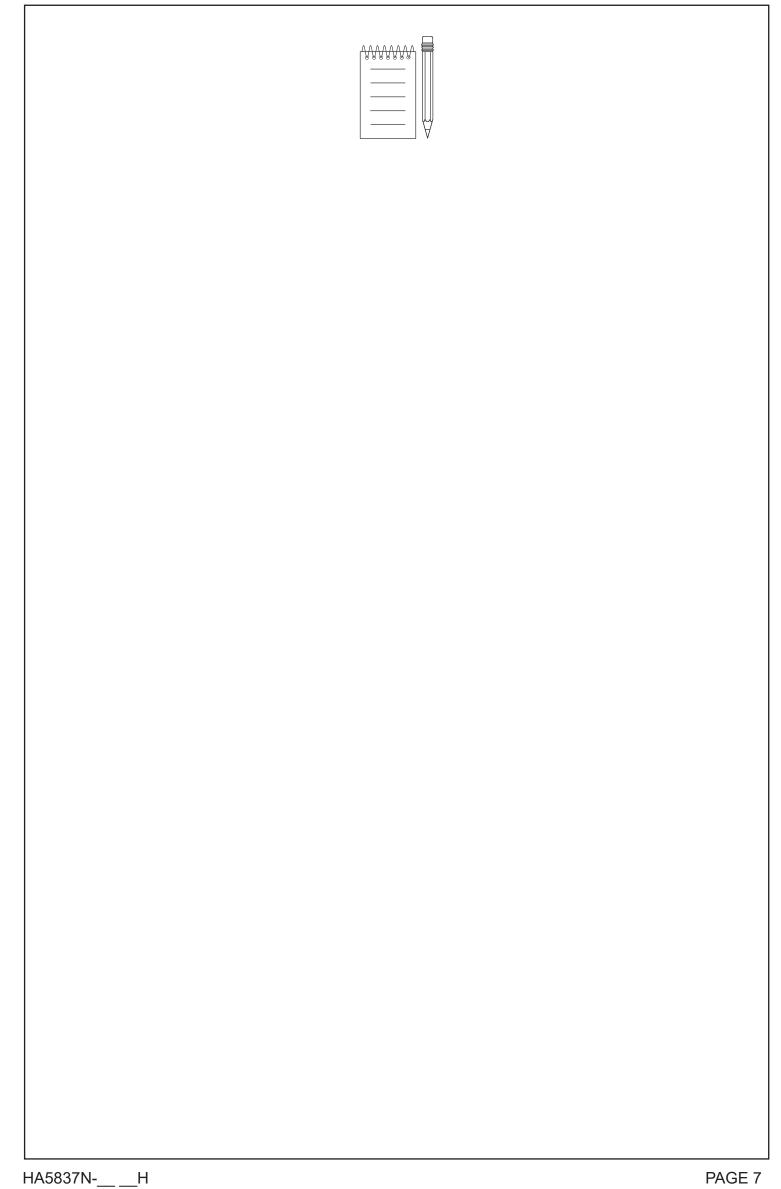


HA5837N-\_\_ \_H

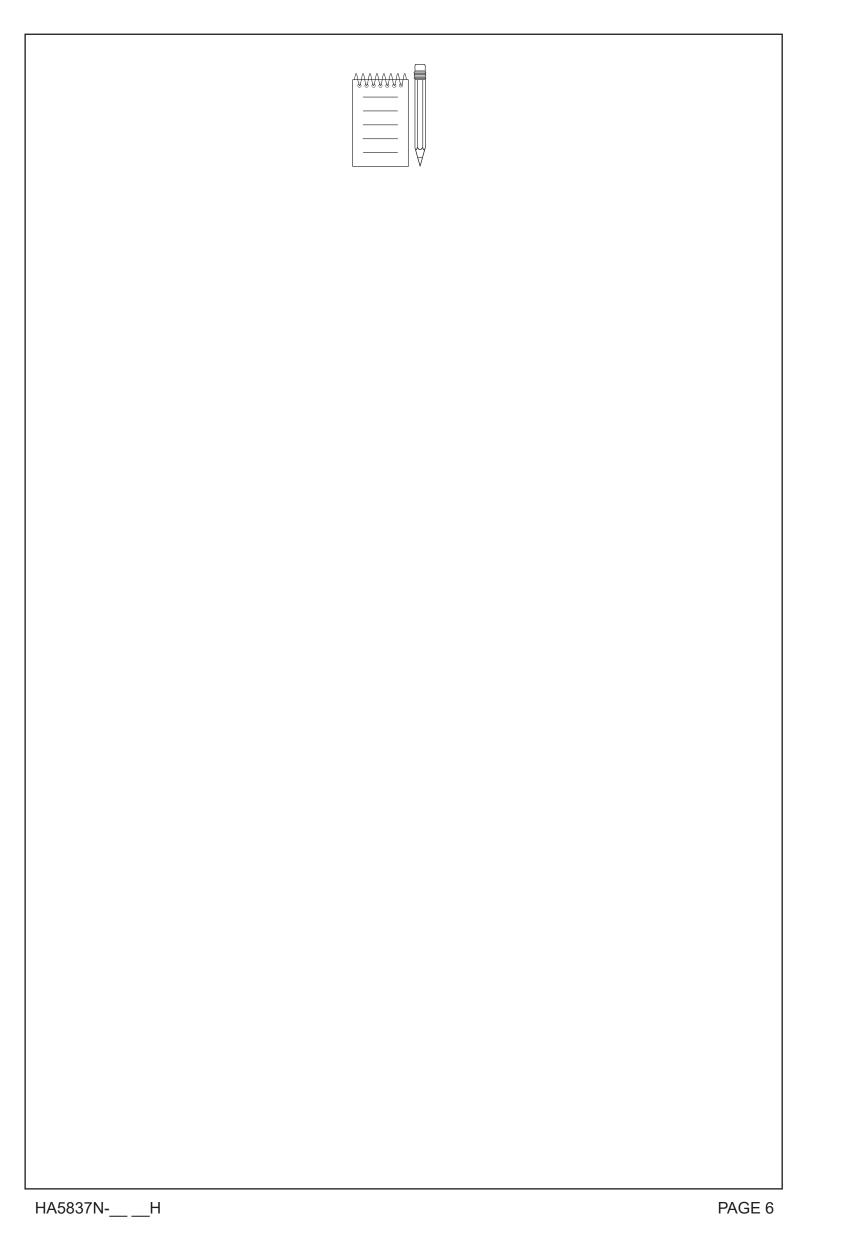

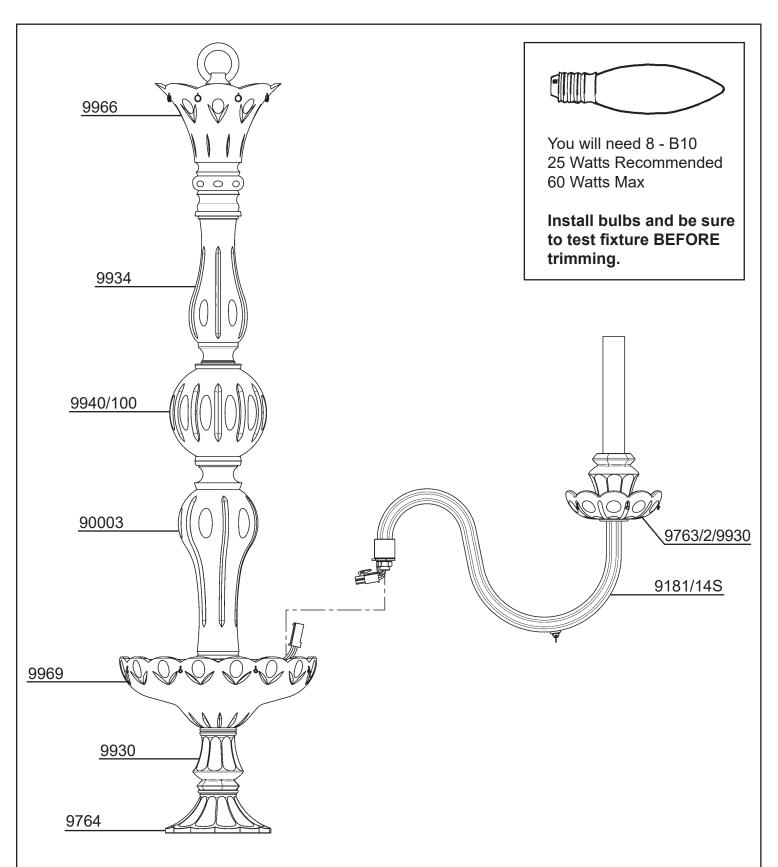

**20** Connect arm wires using plug-in connectors. See detailed illustration.



**21** Push wires into hole and attach arm to washer by rotating arm into place. Lock down by tightening screws into flange. See detailed illustration.

22 Install bobeche on every arm and screw bulbs into all sockets. Connect power and test fixture before trimming. If any of the bulbs do NOT light - DISCONNECT POWER. Double check the wire connections.

