


SCHONBEK®

SCHONBEK IS A WORLD LEADER IN CHANDELIER
DESIGN. PATENTS INCLUDE:
#D5,460,269

CHANDELIER 6818-____A TRIM DIAGRAM

(Finish Option)

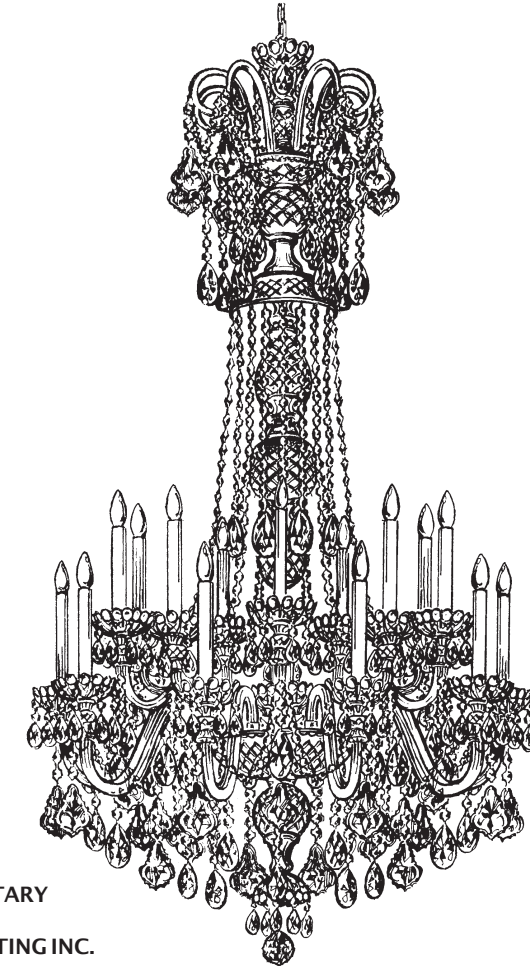

THIS DESIGN IS THE PROPRIETARY
TRADE DRESS/TRADE MARK OF
SCHONBEK WORLDWIDE LIGHTING INC.

18 + 5 Lights
Diameter: 36"
Body Length: 68"

SCHONBEK®

This fixture was designed and manufactured in Plattsburgh, N.Y. Our high-quality crystal fixtures are made with state-of-the-art manufacturing equipment. If you have any questions about this or any of our more than 450 crystal products, contact your nearest authorized Schonbek distributor.

CAUTION... RISK OF ELECTRICAL SHOCK. Make sure the electrical supply to the chandelier is turned off at the main fuse or circuit breaker before doing any installation. All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

HANGING WEIGHT: 90 pounds.

BULBS: (5) Candle shaped candelabra base C7 bulbs. 7-1/2 - Watts Maximum.
(18) Candle shaped candelabra base C10 bulbs, recommend 25 watts
for best appearance. 60 - Watts Maximum

WARNING: This chandelier meets UL/CSA requirements. Any tampering will void UL/CSA certification.

Follow steps in exact order
Save this trim diagram for future reference


1

IMPORTANT

Please record the following information for future service.

CODE # _____ Four-digit number on outside of carton.
PACKER # _____ See crystal package label.
ORDER # _____ See crystal package label.

Instructions for electrician STEPS 2 - 7

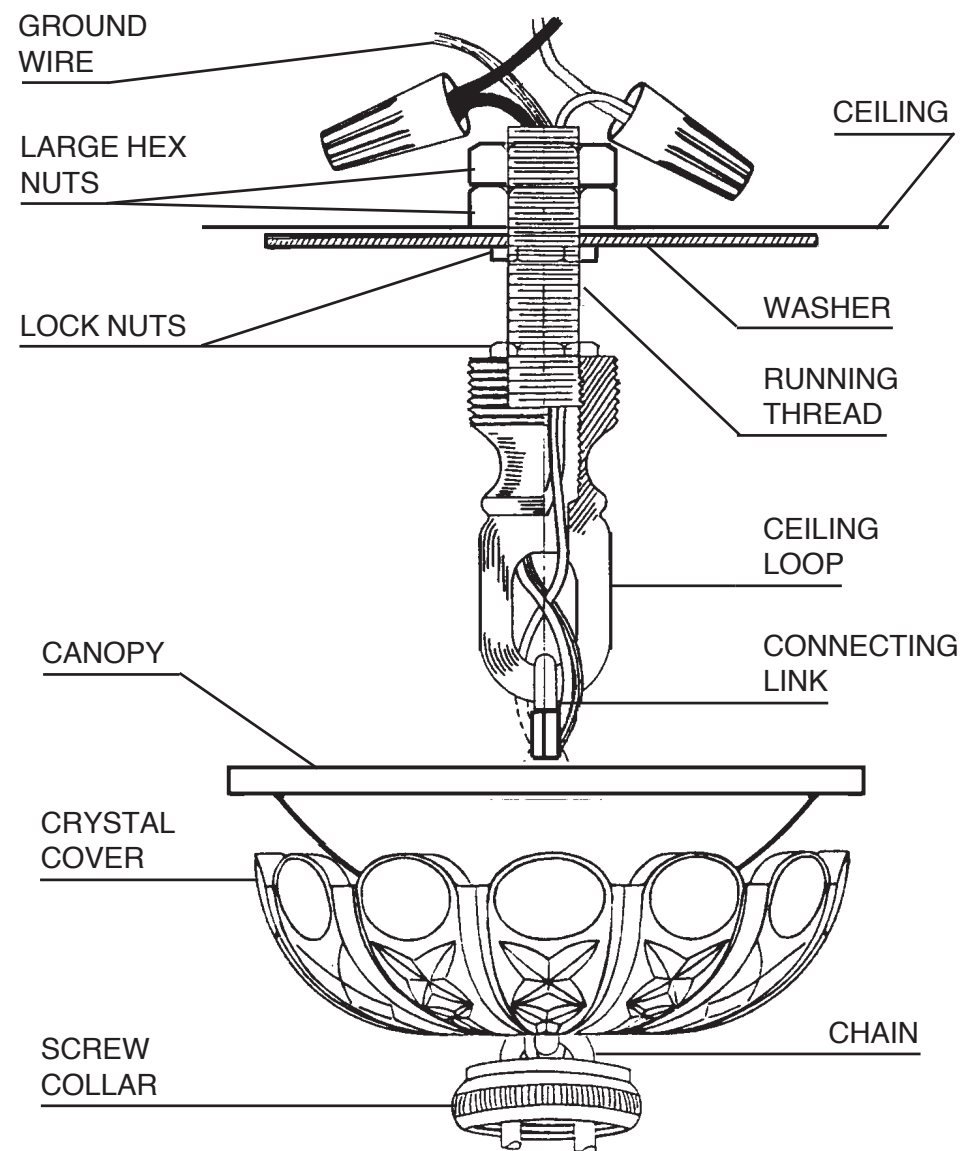

2 MAKE SURE POWER IS DISCONNECTED!!

3 Attach washer to supporting member in ceiling sufficient to support weight of fixture.

4 Slip screw collar, prismatic cover and metal canopy over chain. Determine the suspension length of the fixture and cut chain, if necessary. Use two connecting links to attach chain to chandelier loop and ceiling loop.


5 Insert stem wire through chain and ceiling loop. Connect wires. Fixture **MUST** be grounded.

6 Check distance from ceiling to loop to assure canopy assembly will be flush against ceiling.

7 Attach canopy to ceiling with screw collar.

FRAGILE:

CAUTION: Glass parts are fragile. To avoid breakage use care when assembling or cleaning.

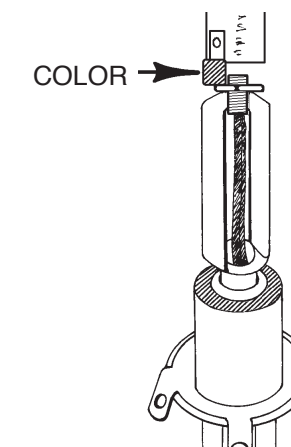

WHEN ORDERING REPLACEMENT ARM(S):

- Give arm number from trim diagram
- Give color code from the arm itself

MAINTENANCE:

Use a soft, lint - free cloth to clean the metal frame.

UNDER NO CIRCUMSTANCES SHOULD METAL POLISHES, CLEANERS, ABRASIVES OR AEROSOL SPRAYS BE USED.


While the latest finishing techniques have been used on the metal frame, such finish cannot be unconditionally guaranteed. The main cause of deterioration, apart from certain atmospheric conditions, is improper cleaning.

To clean the crystals, polish with a damp chamois.

You are cleaning delicate jewelry... Take the greatest care.

IMPORTANT:

Do not clean crystals in a dishwasher. The finish of the metal clips and hangers will be ruined and the crystals may be damaged.

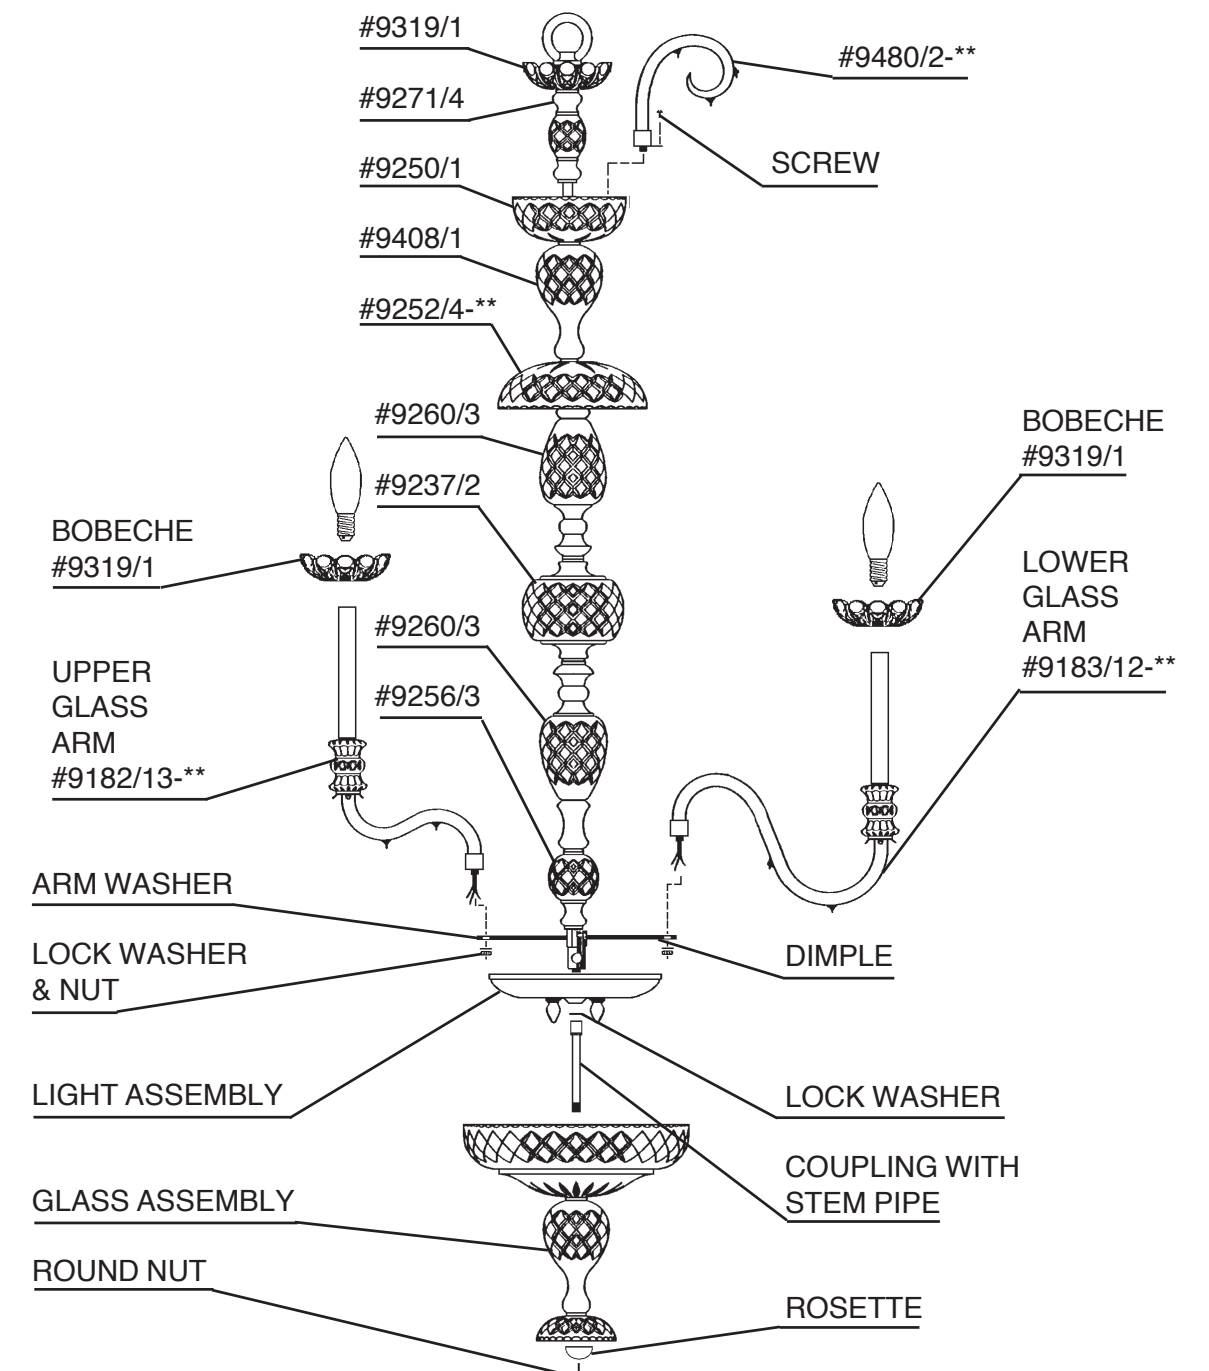


8 Install scrolls into washer with screws provided. ALTERNATELY install upper and lower arms into the washer. Line up holes in arms with dimple in washer. Use lock washer and nut to secure arms in place.

9 Connect bare ground wires in each arm to bare ground wire in center column. Use electrical tape to secure wire nuts. NO MORE THAN 5 - WIRES PER WIRE NUT. Sufficient quantities of jumper wires and wire nuts are provided.

10 Connect white arm wires to neutral column wire (ribbed or marked is neutral). Connect black arm and light assembly wires to power wire in column. Carefully press wires as close as possible to the underside of washer. Attach light assembly with lock washer and coupling with stem pipe. Install 5 - C7 bulbs.

11 Install bobèches and bulbs, connect power and test the fixture BEFORE attaching glass assembly. If any of the bulbs do NOT light - DISCONNECT POWER. Double check the wire connections. Attach glass assembly with rosette and round nut.

**Instructions for crystal trimming
STEPS 12 - 25**

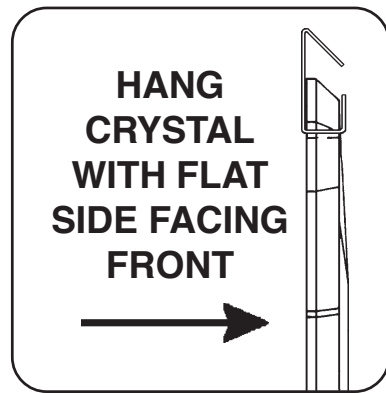

- 12** Hook Crystal "A" into bracket on the center upper column bobèche.
- 13** Hook Crystal "B" into the inside ring on scroll.
- 14** Hook Crystal "C" into the lower ring on scroll. Hook Chain "D" in side loops on Crystal "C". Chain "D" are swagged between Crystal "C".
- 15** Hook Crystal "E" into the upper ring on scroll. Hook Chain "F" into the loops on Crystal "E". Chain "F" are swagged between Crystal "E".
- 16** Hook Chain "H" into every other ring on the center column bobèche. Hook other end into the back tab under bobèche on upper arm.
- 17** Hook Crystal "G" into every other ring on the center column bobèche.
- 18** Screw Crystal Ball "J" onto the bottom of chandelier. Tighten setscrew with allen wrench provided to lock ball into position.
- 19** Hook Crystal "A" into rings on the lower column bobèche.
- 20** Hook Crystal "K1" & "L" of each into rings on upper arm.
- 21** Hook Crystal "M" into center tab under upper arm bobèche.
- 22** Hook Crystal "R", "L" & "N" of each into the rings on lower arm.
- 23** Hook Crystal "O" into center tab under lower arm bobèche.
- 24** Hook Chain "P" into side tab under bobèche on lower arm. Hook other end of Chain "P" into side tab under bobèche on upper arm. Chain "P" swags between upper and lower arms.
- 25** Every bobèche is trimmed with Crystal "Q1" on upper and lower arms, one suspended from every bracket.

