





TRILLIANE 5871- __ __ A

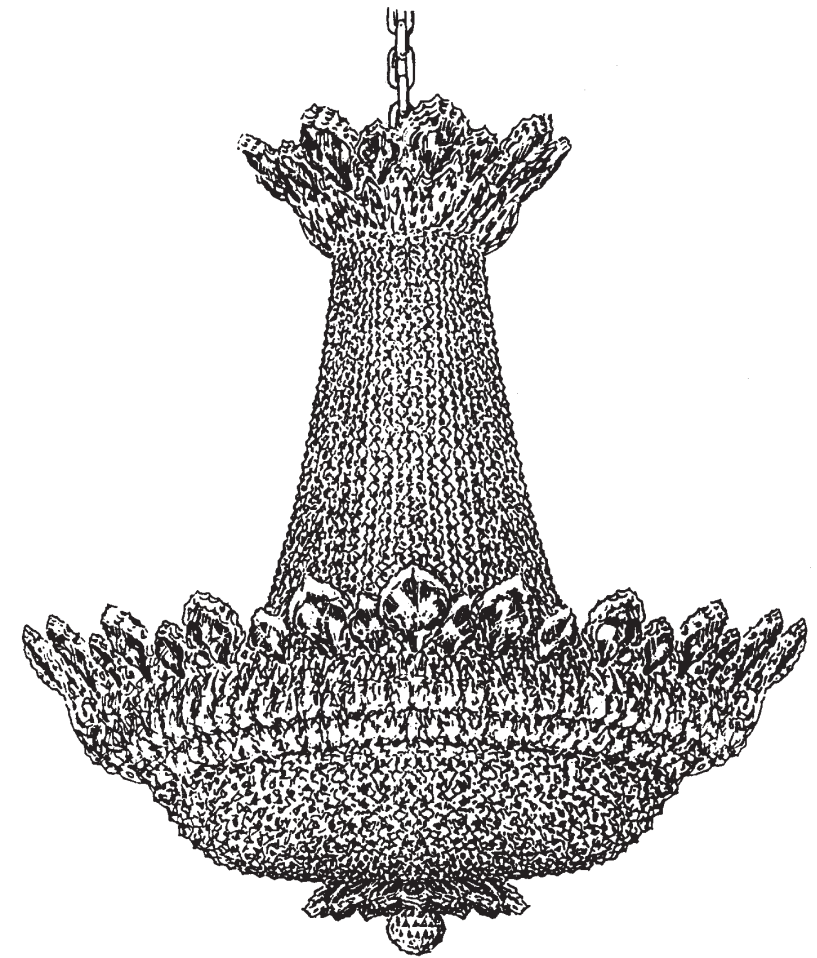


THIS DESIGN IS THE PROPRIETARY
TRADE DRESS/TRADEMARK OF
SWAROVSKI LIGHTING, LTD.

24 Lights
Diameter: 24"
Body Length: 24"
Hanging Weight: 35lbs.

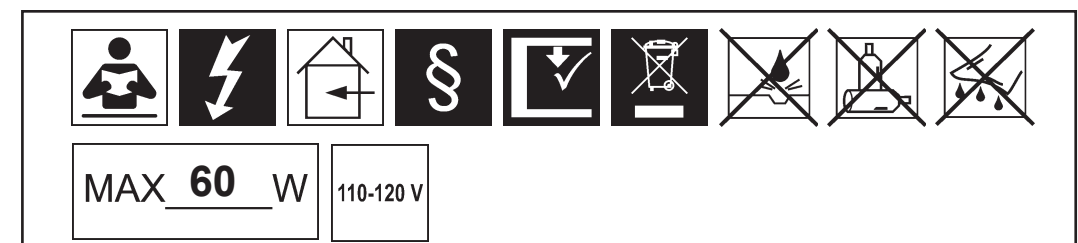


SCHONBEK® is a member of the Swarovski group.


All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

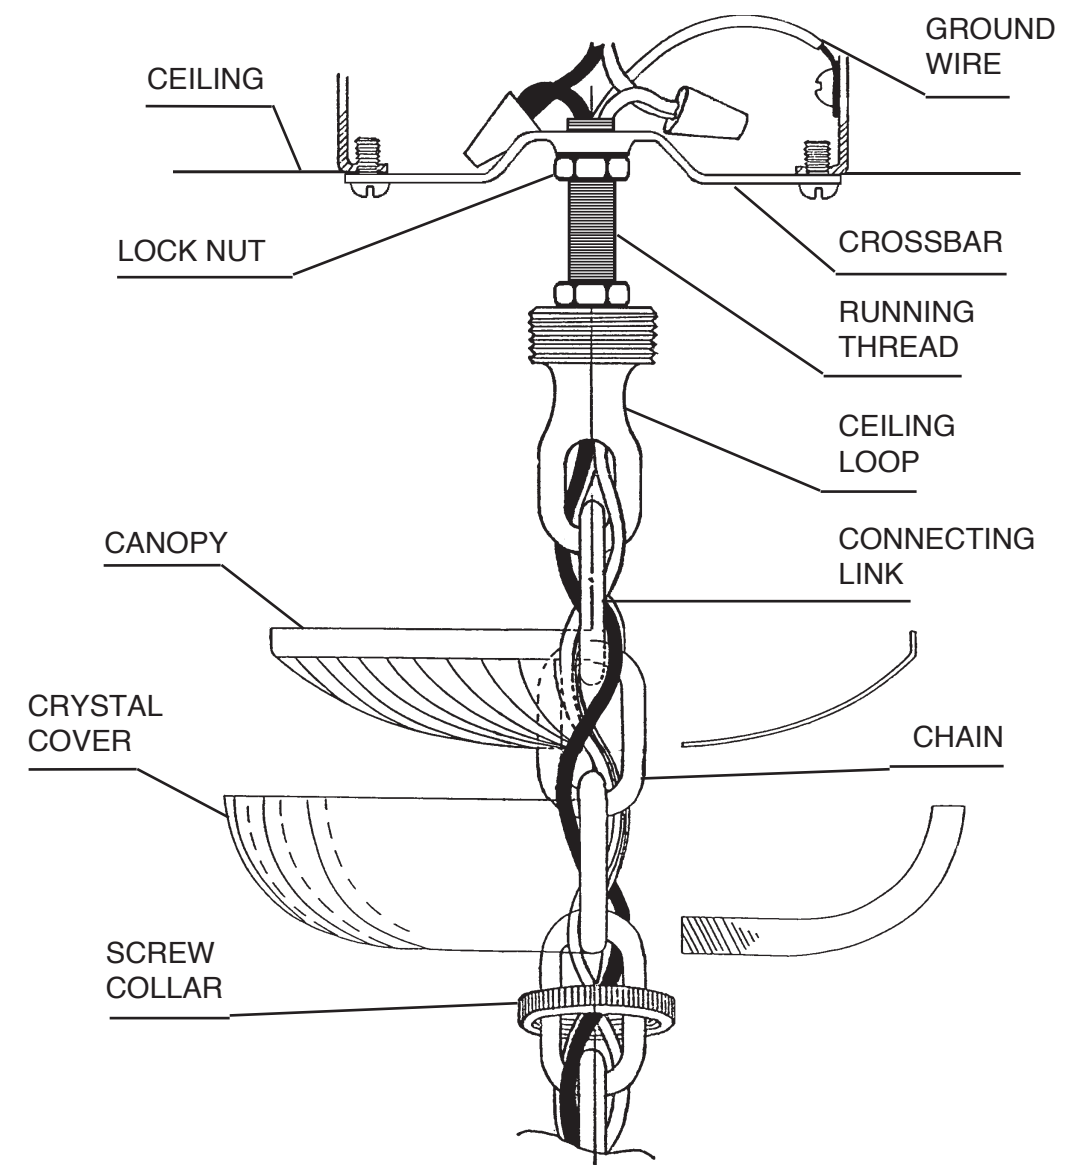

- 1 MAKE SURE POWER IS DISCONNECTED!!**
- 2** Attach crossbar to outlet box.
- 3** Slip screw collar, crystal cover and metal canopy over chain and then determine at what length the fixture is to be suspended. Join the required length of fixture chain to connecting link on stem of fixture and loop attached to ceiling canopy at other end.
- 4** Feed stem wires through chain, through loop at canopy end, and attach to power wires in outlet box. Fixture **MUST** be grounded.
- 5** Check distance from ceiling to loop to assure canopy assembly will be flush against ceiling.
- 6** Attach canopy to ceiling with screw collar, thereby retaining complete assembly against ceiling. Screw bulbs into all sockets. Test power to insure proper wiring before hanging trim from fixture.

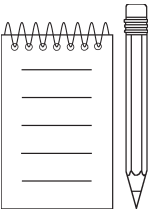

Installation of Crystal "B"

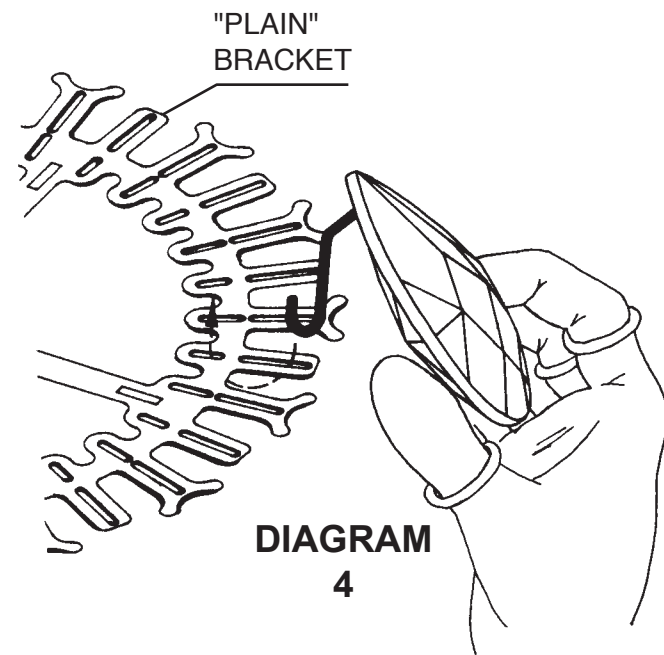


Position the crystal above the "plain" bracket so that the end of the hook enters the slot, gently push toward the center of the fixture and raise the crystal making sure that the end of the hook comes up through the inner slot, in line with the outer slot.

With the hook in the bracket, as shown, pivot the crystal downwards so that the hook rests in the end of the outer slot.








DIAGRAM 5

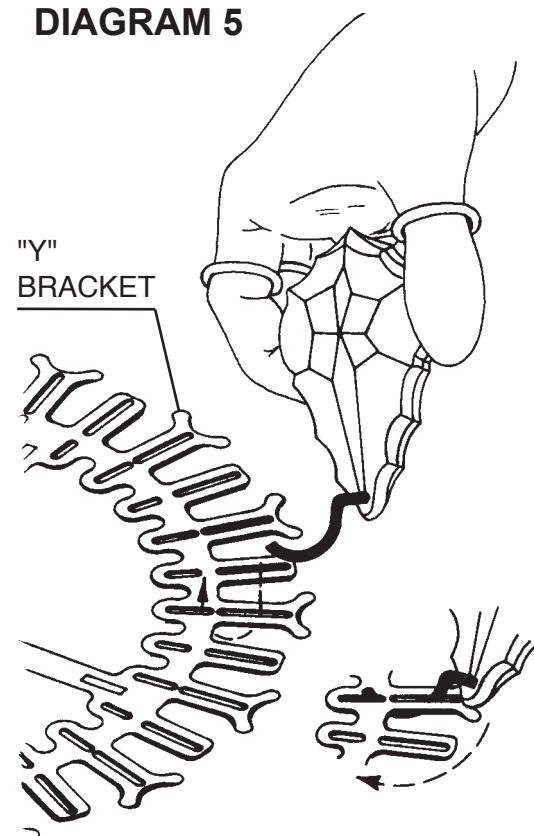

Installation of Crystal "C" and "D"

Position the crystal above the "Y" bracket so that the end of the hook enters the long slot, gently push toward the center of the fixture and raise the crystal making sure that the end of the hook comes up through the short slot, in line with the long slot.

With the hook in the bracket, as shown, pivot the crystal downwards so that the hook rests in the end of the long slot.

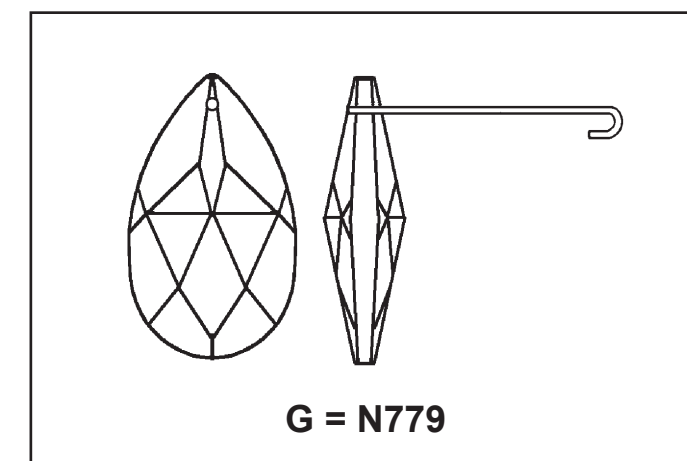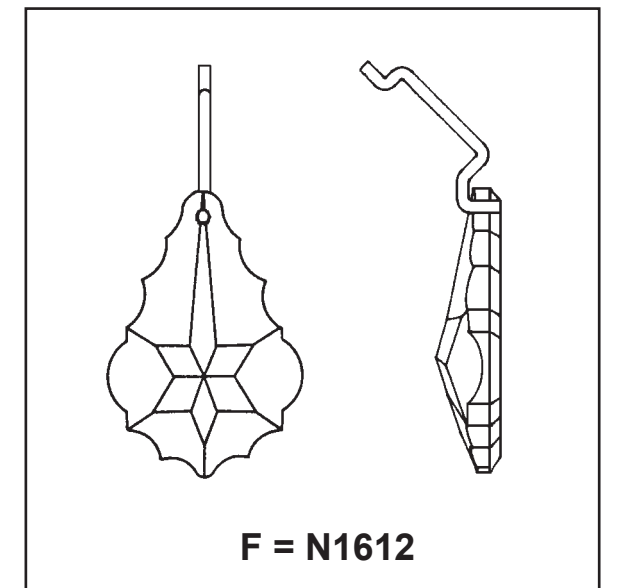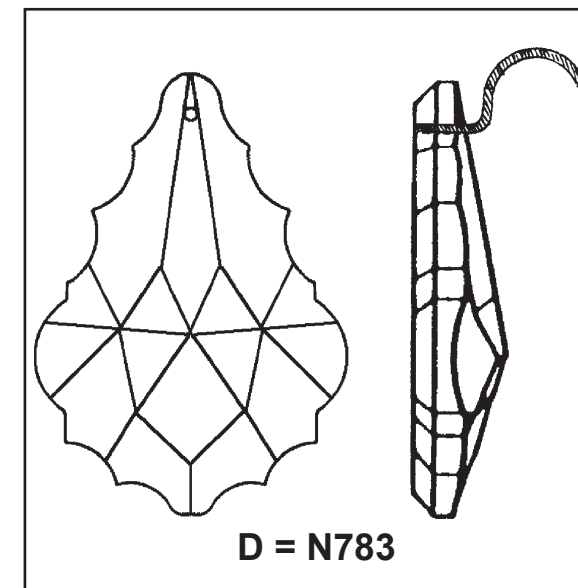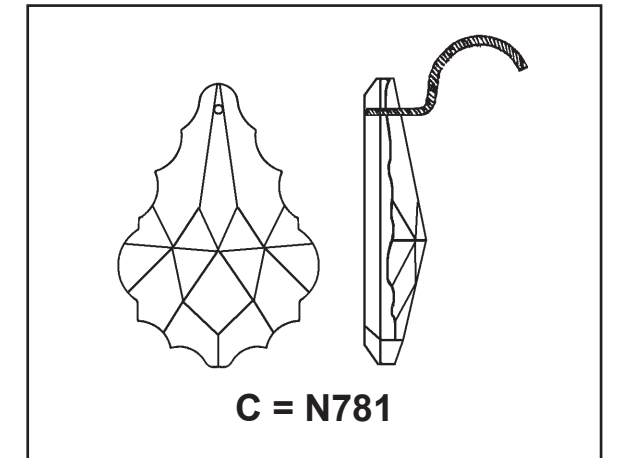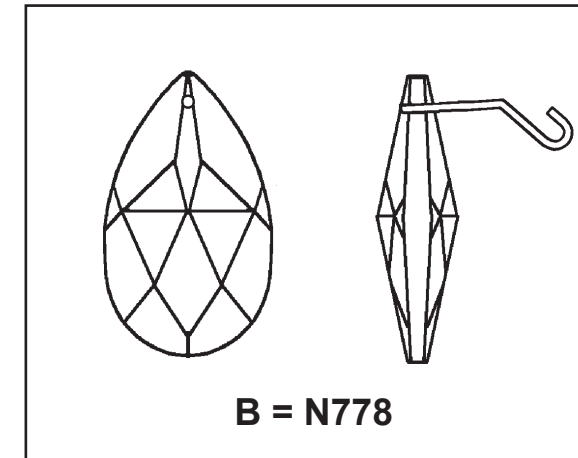



7

You will need 24 - B10
25 Watts Recommended
60 Watts Max

Install bulbs and be sure
to test fixture **BEFORE**
trimming.

8 Hook Crystal Chain "A1" (small crystal at top) into ring 2 pin hole and hook the bottom of the crystal chain into ring 3 leg. See diagram 1 for detailed instructions. Hook Crystal Chain "A2" (small crystal at top) into the ring 2 leg and hook the bottom of the crystal chain into ring 3 pin hole. See diagram 1 for detailed instructions. **NOTE: Crystal Chain "A2" overlaps Crystal Chain "A1".**

9 Hook Crystal "B" into the "plain" bracket of ring 1. See diagram 4 on page 6. Hook small Crystal "C" into every second "Y" bracket of ring 1. See diagram 5 on page 6. Hook large Crystal "D" into the remaining "Y" brackets on the ring 1. See diagram 5 on page 6.

10 Screw finial assembly onto bottom of chandelier. Hook Crystal Chain "E" (large crystal towards top) into the ring 5. Hook Crystal "F" into the lexan washer on the finial assembly. See diagram 2 for detailed instructions.

11 Hook the bottom of Chains "E" into the lexan washer. Close bottom hook after inserting into lexan washer.

12 Hook Crystal "G" into the back slot of the "Y" bracket of ring 4. See diagram 3 for detailed instructions. Hook Crystal "B" into the "plain" bracket of ring 4. See diagram 4 on page 6. Hook small Crystal "C" into every second "Y" bracket of ring 4. See diagram 5 on page 6. Hook large Crystal "D" into the remaining "Y" brackets of ring 4. See diagram 5 on page 6.

